



- 1**




Shake well
- 2**




Unscrew Cap
- 3**

Fully cover tip with Absorbent Sleeve (or like material).

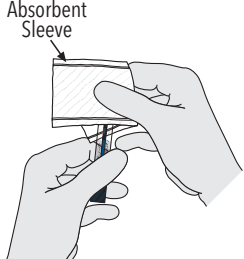


Absorbent Sleeve
- 4**

**QUICKLY** snap off.  
DO NOT TWIST.

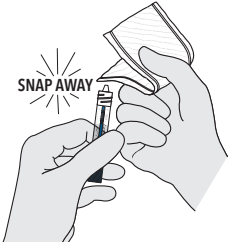

SNAP AWAY
- 5**

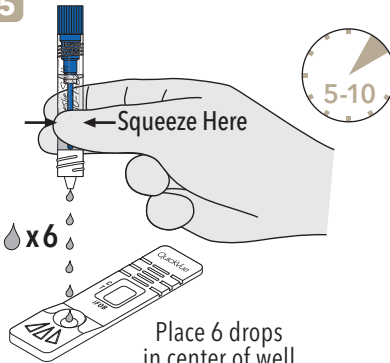

Squeeze Here

x6

Place 6 drops in center of well

5-10

